

Deleting Framing in Home Designer Pro

Reference Number: **KB-00197**


Last Modified: **July 16, 2015**

The information in this article applies to:



QUESTION


I would like to delete framing items like my roof framing or wall framing. How can I do this?

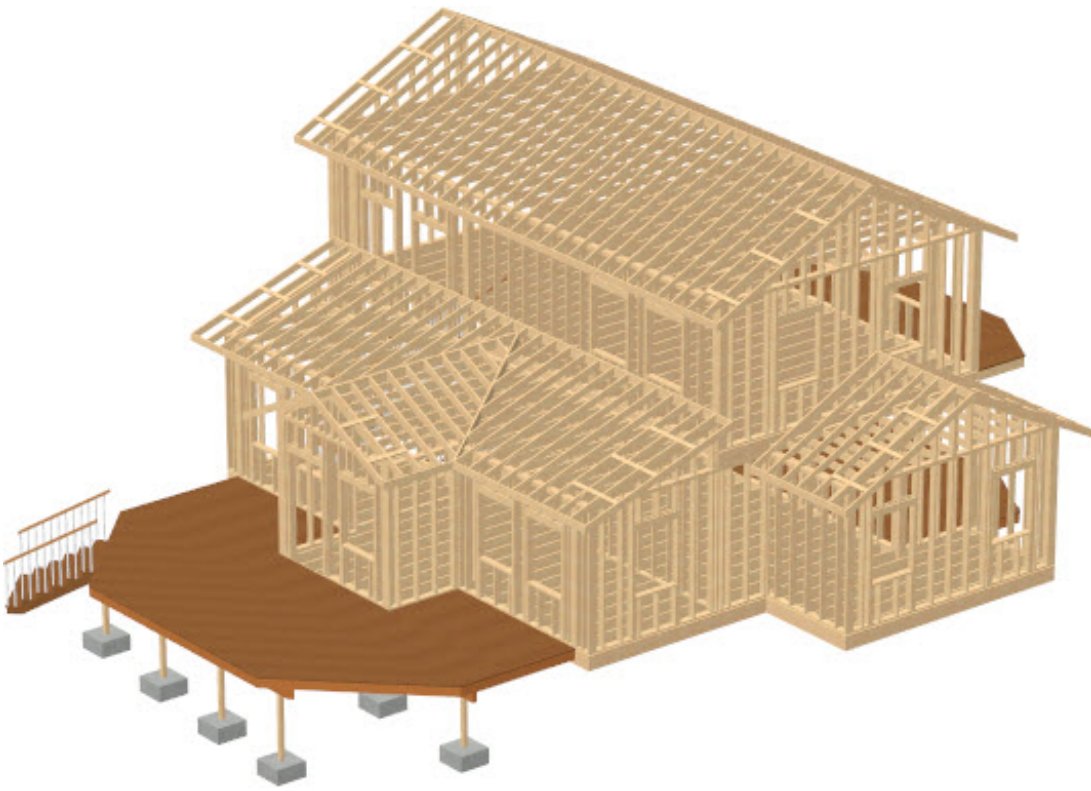


ANSWER


Deleting the framing you have generated is easy to accomplish when using the Delete Objects dialog.

To delete framing from your plan


1. Select **Edit> Delete Objects**  from the menu
2. In the **Delete Objects** dialog:

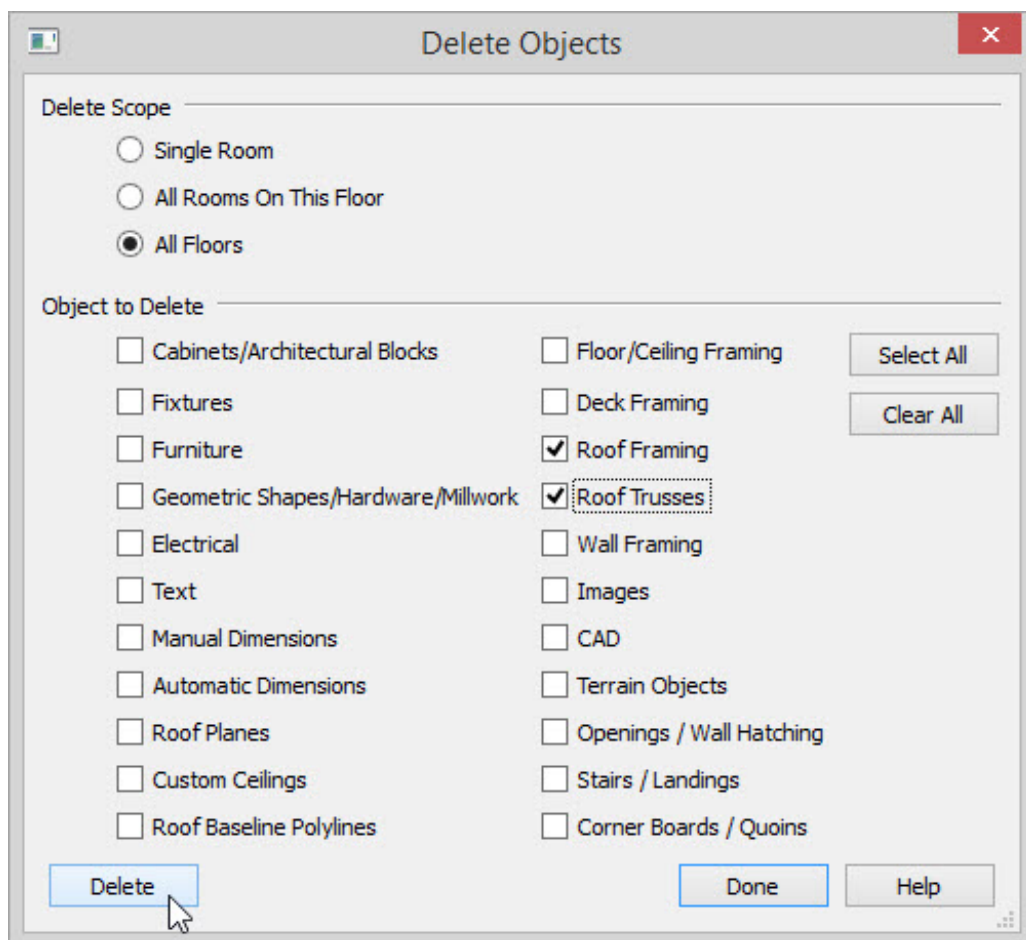

- Change the Delete Scope to **All Rooms** or **All Floors** depending on the location of the framing you want to delete.
 - Place a checkmark next to the types of framing you want to delete.
3. Click **OK** to close the dialog and apply your changes.

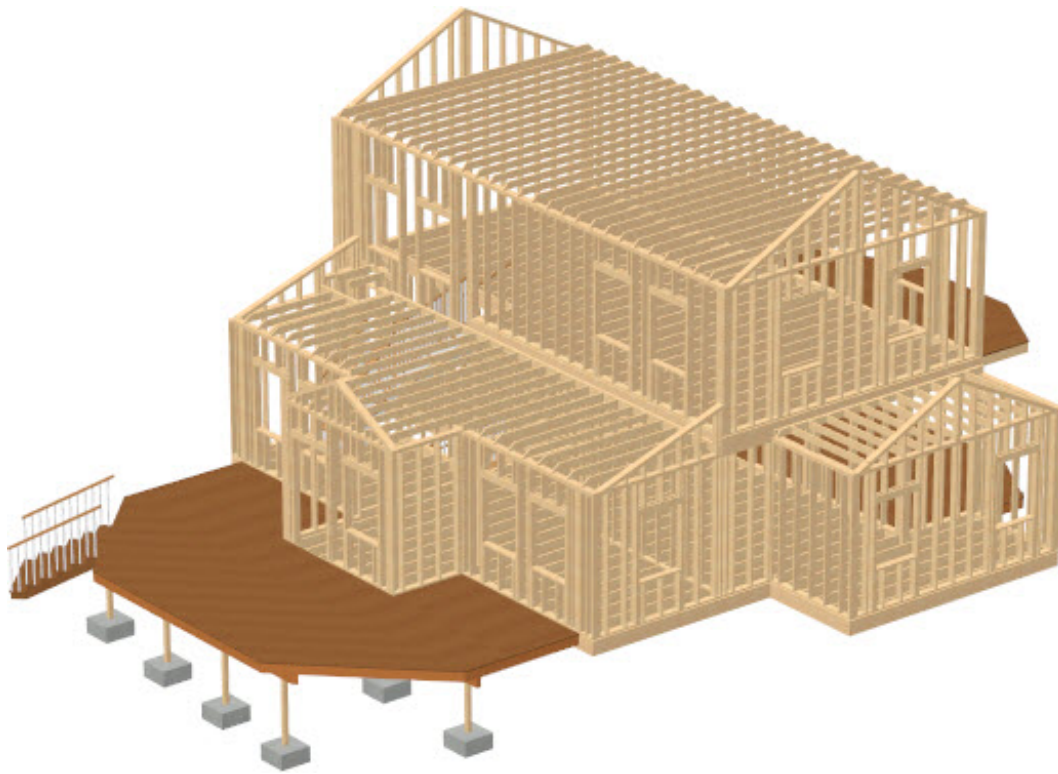


To turn off the display of framing

1. While in the view you do not want to see the framing displayed, select **Tools> Display Options** 

In Prior versions select Tools> Display Settings> Display Options.

 2. Scroll down to the Framing layers and uncheck the **Disp** column.

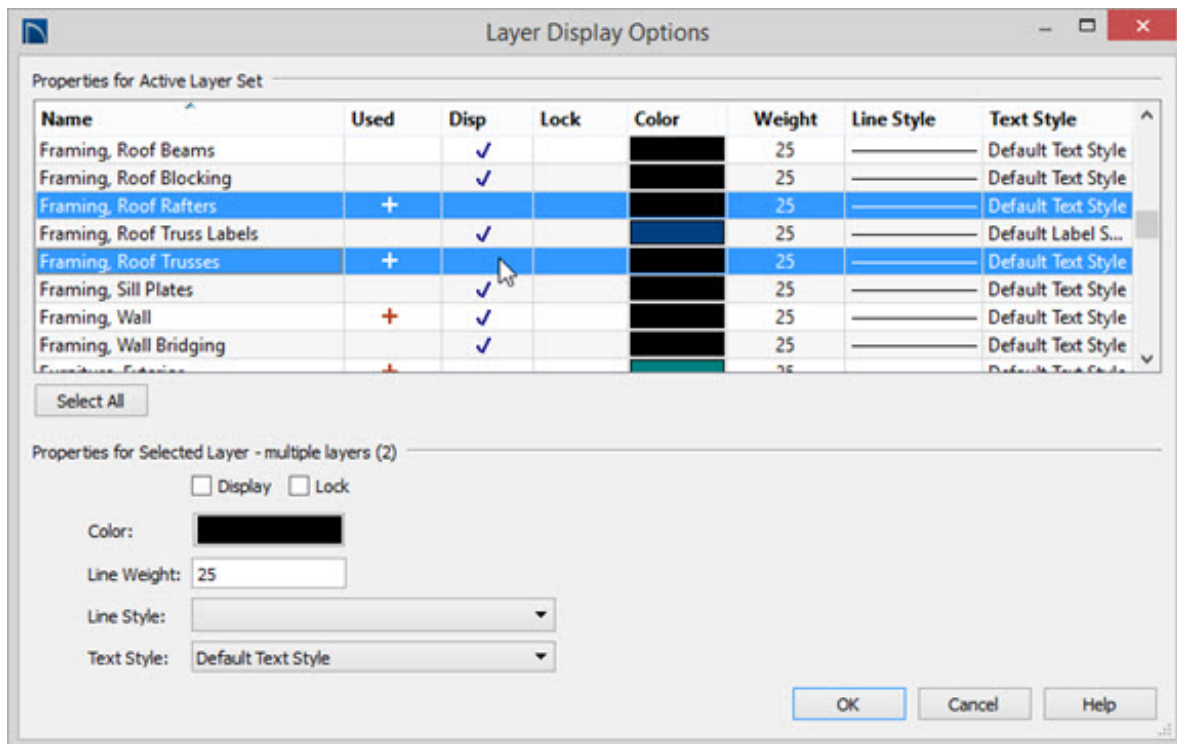

3. Click **OK** to apply the change.

208-292-3400 (tel:+1-208-292-3400) © 2003–2017 Chief Architect, Inc.

[Terms of Use \(https://www.chiefarchitect.com/company/terms.html\)](https://www.chiefarchitect.com/company/terms.html)

[Privacy Policy \(https://www.chiefarchitect.com/company/privacy.html\)](https://www.chiefarchitect.com/company/privacy.html)