

# Correcting Crooked Walls or Lines

---

Reference Number: **KB-00311**

Last Modified: **July 23, 2021**

---

The information in this article applies to:



## QUESTION

When I go to draw a wall or line in my floor plan view, it looks jagged and crooked. Also, I have noticed that a yellow warning symbol has appeared in the center of my walls. How can I correct this?


## ANSWER

If your walls and lines are drawing crooked and have a yellow warning symbol appearing in the middle of them, this usually indicates that Angle Snaps have been turned off, perhaps unintentionally.


To toggle Angle Snaps

1. In your plan, select **Edit> Snap Settings> Angle Snaps** .


When this feature is toggled on, a check mark will display next to it in the menu.

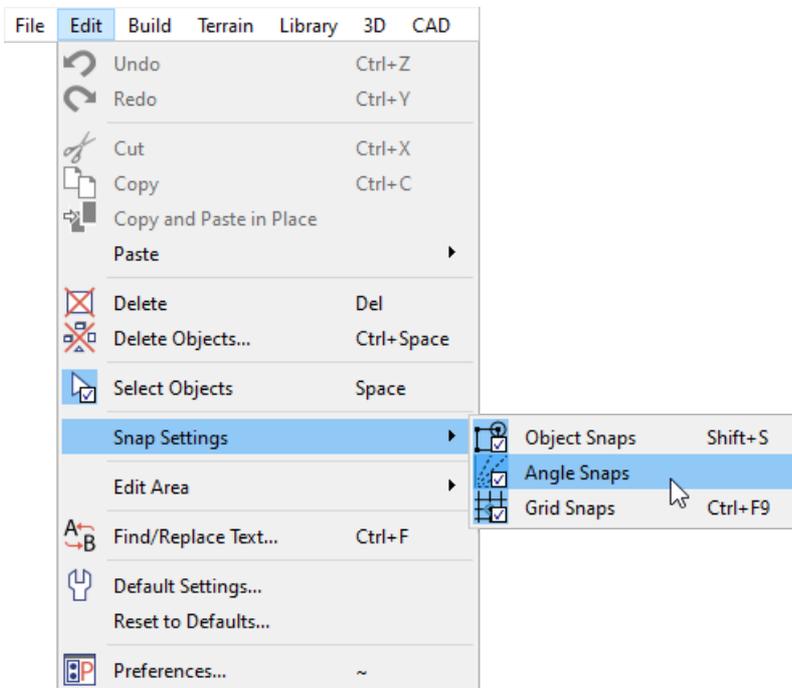

2. Once you have turned Angle Snaps back on, you should now be able to draw straight walls and lines, and correct any existing walls or lines that were drawn slightly off-angle.
  - o To correct existing walls, click on the yellow **Warning** ⚠ symbol and select the **Fix Off Angle Wall** option. In the dialog that appears next, specify a **New Angle** value.

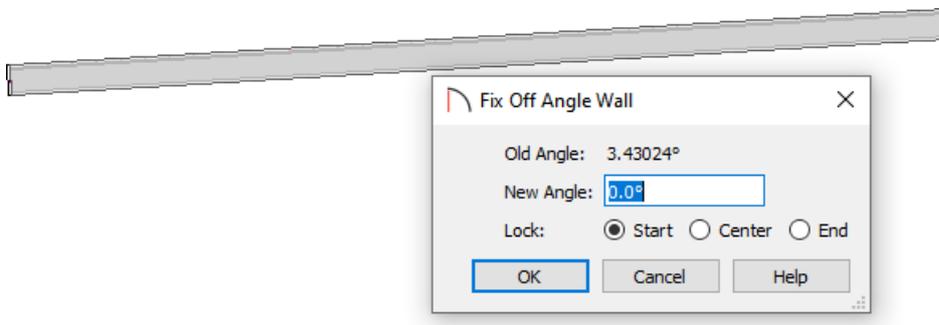

Alternatively, you can select a wall, click the **Open Object**  edit tool, and on the **GENERAL** panel of the **Wall Specification** dialog that displays, you can change the **Wall Angle** to your liking.

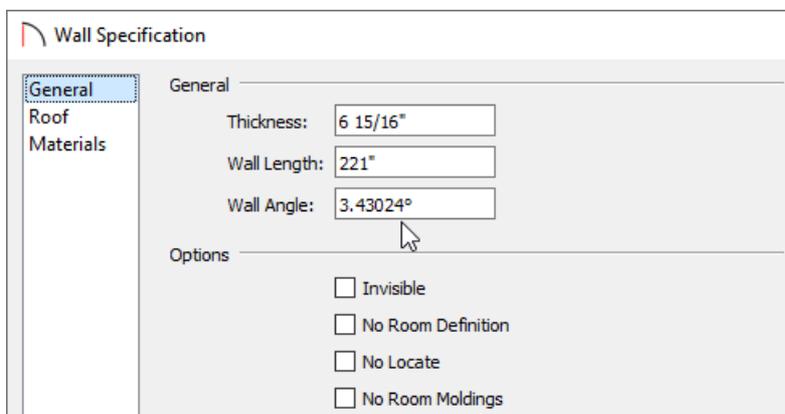

- o To correct existing CAD lines, select a CAD line, click the **Open Object**  edit tool, and on the **LINE** panel of the **Line Specification** dialog that displays, change the **Angle** to your liking.

**Line Specification** [X]

**Line**  
Line Style  
Arrow

**Length/Angle**  
Length: 174 1/8"  
Angle: 8.913834°

**Start Point**  
X Position: 125"  
Y Position: 62"

**End Point**  
X Position: 297"  
Y Position: 89"

OK Cancel Help

Related Articles

[📄 Fixing Wall Connections \(/support/article/KB-00187/fixing-wall-connections.html\)](/support/article/KB-00187/fixing-wall-connections.html)