

Toggling Color On and Off

Reference Number: **KB-00372**

Last Modified: **July 23, 2021**

The information in this article applies to:





QUESTION

How do I turn off the color so that my objects display in black and white, or grayscale?

ANSWER

The display of color on-screen can be toggled on and off by selecting **View > Color**  from the menu.

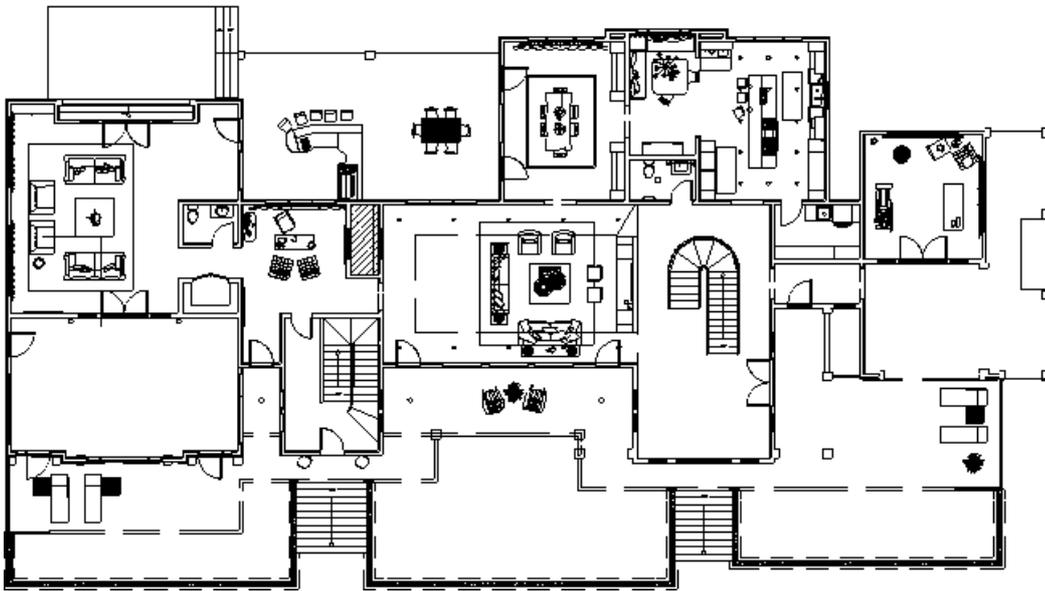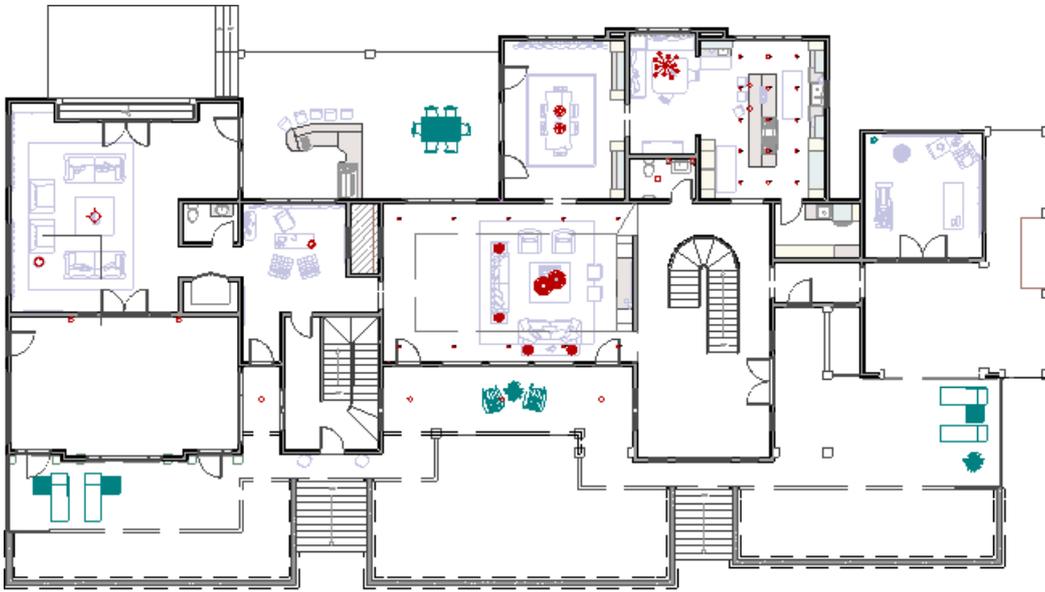

If **Color**  is toggled off in any 3D view, the view will be displayed in grayscale.

If **Color**  is toggled off in floor plan view, the view will be displayed in black and white.

You can also print in color, or grayscale, using the **Print** dialog. Check the **Print in Color** box to print in color or clear the check box to print in grayscale/black and white.