Specifying the Inset Depth of a Window

Reference Number: **KB-00419** Last Modified: **April 28, 2025**

The information in this article applies to:



QUESTION


A home that employs very thick walls, such as a straw bale, rammed earth, or log home structure may have very deep windows. How can I change the placement of the window within the wall?

ANSWER

Using the Window Specification dialog, it is possible to recess the window so it is close to the inside surface of the wall or have it placed closer to the outside of the wall. You can change the exact location of a window by adjusting the Inset values for that window.

To specify the inset for a window's frame and sash

- 1. Using the **Select Objects** \geqslant tool, select a window, then click on the **Open Object** \prod edit button.
- 2. On the Frame panel of the **Window Specification** dialog:

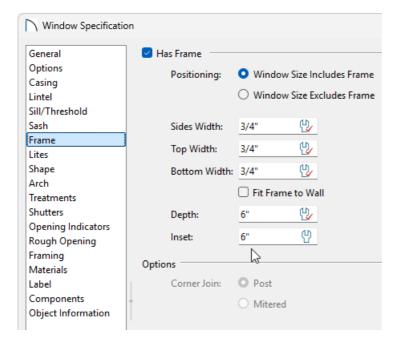


- Uncheck the **Fit Frame to Wall** box.
- Specify a custom value in the **Inset** field. The sash will automatically move with the frame when a value is specified.

In this example, the value has been changed to 6".

3. If you would like to adjust the sash separately from the frame, select the SASH panel, then change the **Inset** value to your liking.

In this example, the value is unchanged.

Note: The Sash panel is not available in the Wall Niche Specification dialog, and the settings on this panel are not applicable to Pass-Throughs.

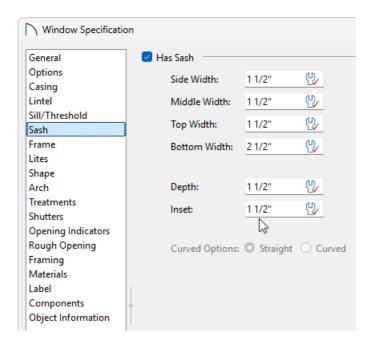

4. When you are satisfied with the Inset values, click **OK**.

Related Articles

- <u>⁴ Editing the Shape of a Window (/support/article/KB-01024/editing-the-shape-of-a-window.html)</u>
- <u> Modifying Wall Thickness (/support/article/KB-00363/modifying-wall-thickness.html)</u>

© 2003–2025 Chief Architect, Inc. All rights reserved // <u>Terms of Use (https://www.chiefarchitect.com/company/terms.html)</u> // <u>Privacy Policy</u>

(https://www.chiefarchitect.com/company/privacy.html)