



Creating a Screened Porch in Home Designer

Reference Number: **KB-00748**

Last Modified: **September 25, 2026**

This article also applies to the following legacy products:

Pro | Architectural | Suite

QUESTION

I would like to add a screened-in porch to my plan. How can I do this?



ANSWER

 
Screened panels can be created by applying a mesh material to the glass component in a window and then using copies of this window to form a porch.

To create a screen porch

1. Select **Build> Window> Window**  and place a window into one of the walls of your porch.
2. Navigate to **3D> Create Orthographic View> Cross Section/Elevation**  and create a cross section/elevation view of the screen porch wall.

In legacy Home Designer versions, navigate to **3D> Create Camera View> Cross Section/Elevation**  instead.


3. In the newly generated view, select your window and using the edit handles:
 - Adjust the top height of the window to match the top of your wall.
 - Adjust the bottom height of the window to the height where you want the bottom of your screen to start.

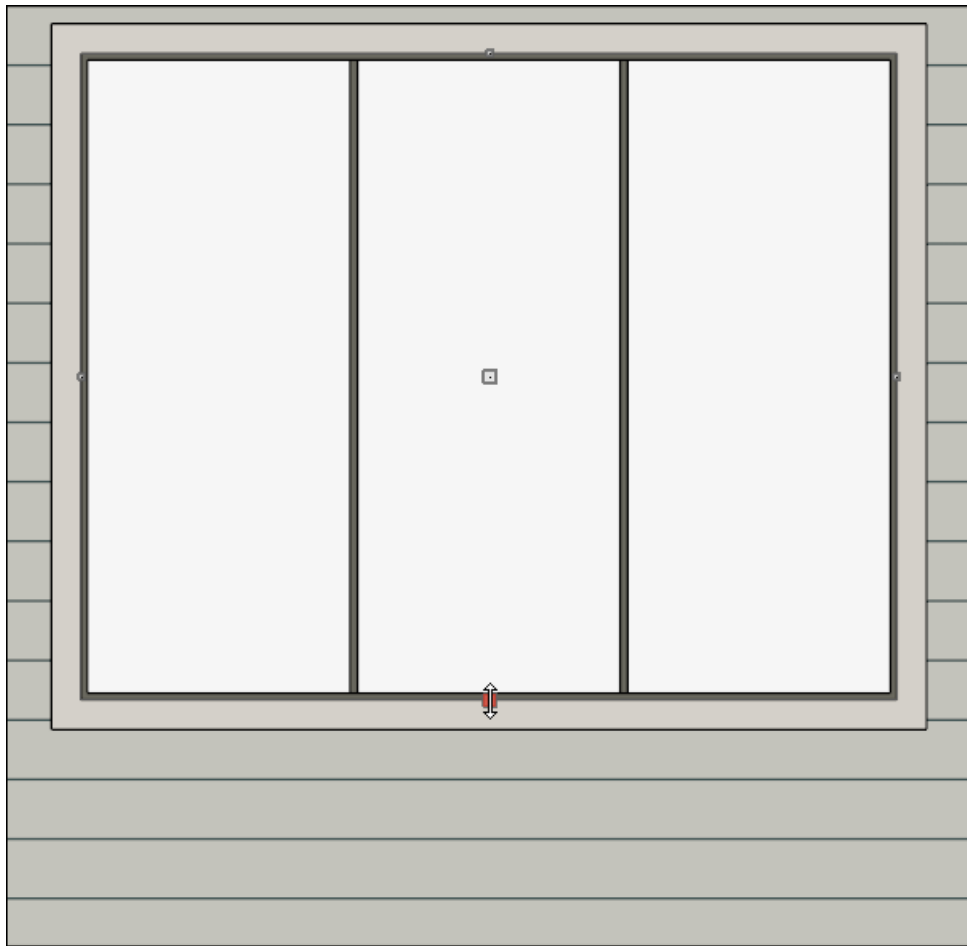

4. Using the **Select Objects**  tool, select the window and click the **Open Object**  edit button.
5. On the **GENERAL** panel of the **Window Specification** dialog that opens, change the Window Type to **Fixed Glass**.
6. Access the **CASING**, **LINTEL***, **SILL/THRESHOLD***, **SASH**, **FRAME***, and **LITES** panels to adjust these various components associated with the window.

Available in Home Designer Pro and Home Designer 2026 and newer. A limited selection of sill and threshold settings are located on the **CASING panel in legacy versions.*

 
7. Select the **MATERIALS** panel, select the **Glass** component, then click on the **Select Material** button.

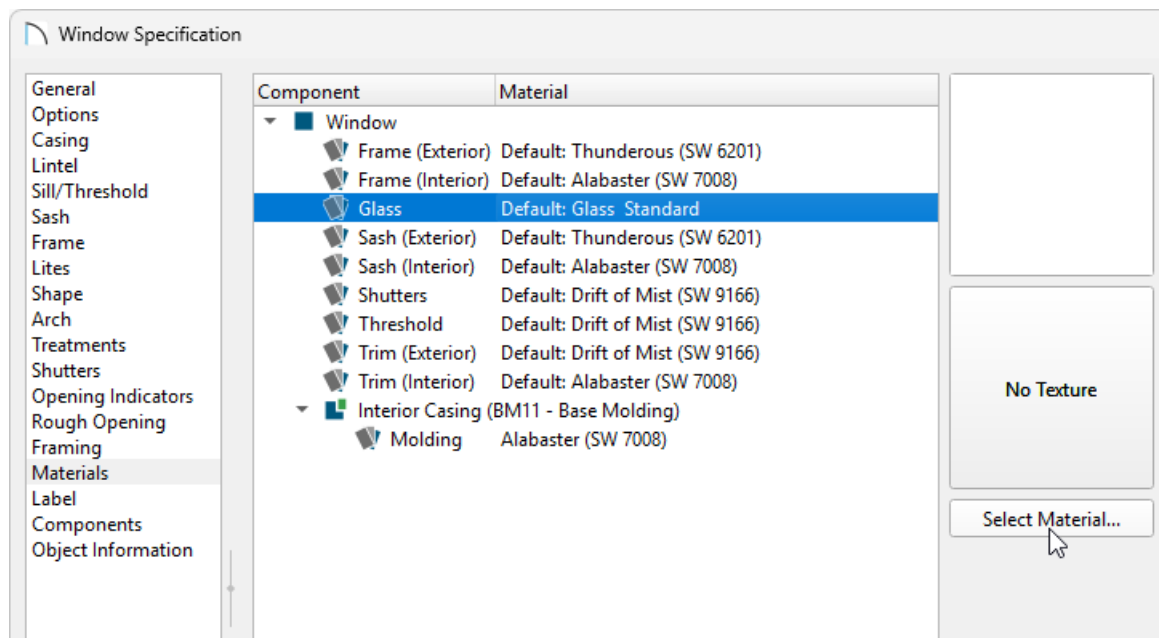

- On the **LIBRARY MATERIALS** panel of the **Select Material** dialog that opens, navigate to **Core Catalogs> Materials> Misc> Screens**, select a screen material, then click **OK**.

In Home Designer 2025 and prior versions, navigate to **Home Designer Core Catalogs> Materials> Fabric & Wall Coverings> Sheers & Shades> Screen> Screen** instead.

 Additional mesh materials, such as Square Mesh, can be located in the [Materials Wire and Lattice \(https://www.chiefarchitect.com/3d-library/index.php?r=site/detail/961\)](https://www.chiefarchitect.com/3d-library/index.php?r=site/detail/961) bonus catalog. For more information on obtaining additional catalogs, please see the [Related Articles](#) section below.

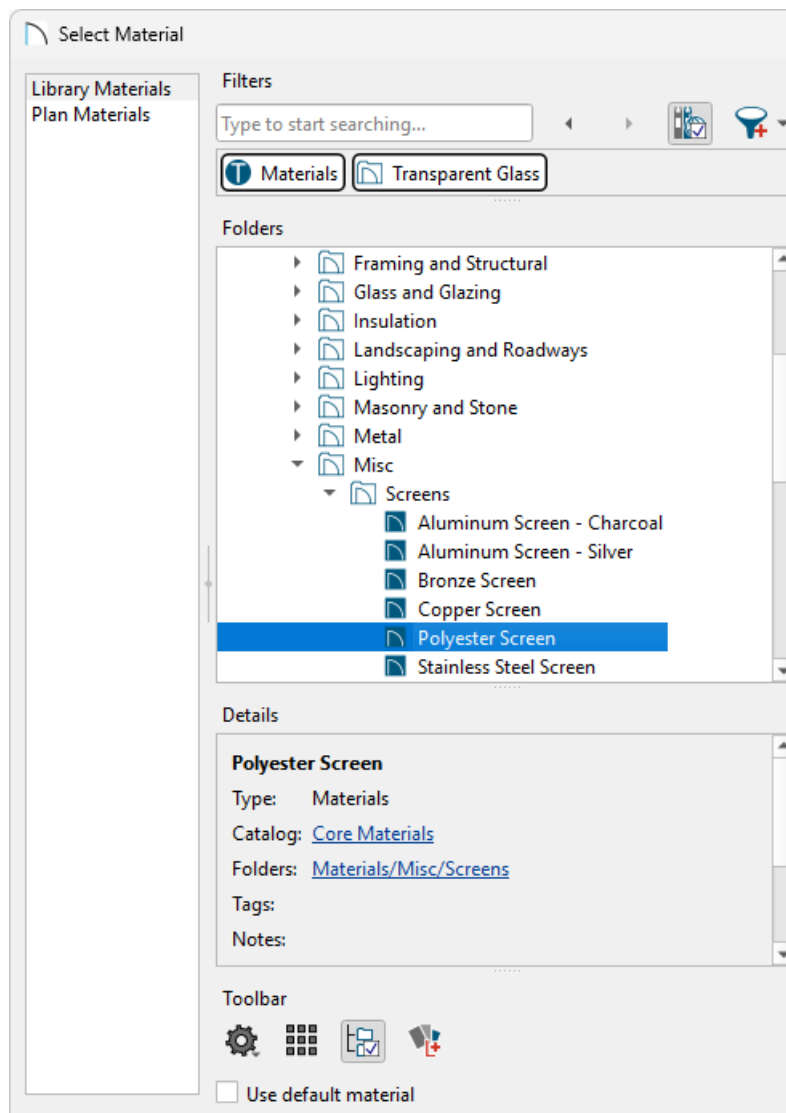

9. Make any other adjustments to the window, then click **OK** once more to close the dialog.

You can now create as many copies of this window as needed using the various edit tools.

Additional catalogs can be found in the [3D Library](https://www.chiefarchitect.com/3d-library/index.php?r=site/library&reset=true) (<https://www.chiefarchitect.com/3d-library/index.php?r=site/library&reset=true>) for furnishing your porch room. For more information on obtaining additional catalogs, please see the [Related Articles](#) section.

Related Articles

- [📄 Creating a Mullied Window \(/support/article/KB-00759/creating-a-mulled-window.html\)](/support/article/KB-00759/creating-a-mulled-window.html)
- [📄 Downloading and Updating Library Catalogs \(/support/article/KB-00048/downloading-](/support/article/KB-00048/downloading-)

[and-updating-library-catalogs.html](#))

■ [Editing the Shape of a Window \(/support/article/KB-01024/editing-the-shape-of-a-window.html\)](#)