

Stopping the Roof from Automatically Rebuilding

Reference Number: **KB-01036**

Last Modified: **August 27, 2021**

The information in this article applies to:





QUESTION


I have created my roof the way I want it to be displayed, but when I go to add new walls or adjust ceiling heights in my rooms, it changes the roof. How can I stop the roof from updating every time I make a change?

ANSWER

To stop the roof from rebuilding when a change is made to the plan, turn off the Auto Rebuild Roofs feature.

To turn off Auto Rebuild Roofs

1. First, launch your Home Designer program and **Open**  the plan that contains your completed roof.
2. From the menu, select **Build > Roof > Build Roof** .
3. On the **ROOF** panel of the **Build Roof** dialog that opens, uncheck **Auto Rebuild Roofs**, then click **OK**.

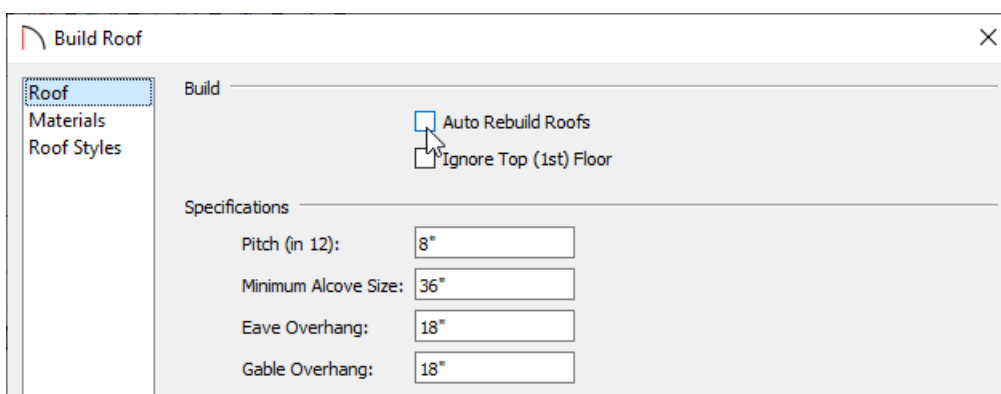

4. With this setting disabled, the program will no longer automatically rebuild the roof if you make a change that affects the roof generation, such as to your exterior walls or ceiling heights.

© 2003–2021 Chief Architect, Inc. All rights reserved // [Terms of Use \(https://www.chiefarchitect.com/company/terms.html\)](https://www.chiefarchitect.com/company/terms.html) // [Privacy Policy \(https://www.chiefarchitect.com/company/privacy.html\)](https://www.chiefarchitect.com/company/privacy.html)