

Using the Round Pier and Square Pad Tools

Reference Number: **KB-01182**

Last Modified: **July 8, 2021**

The information in this article applies to:





QUESTION




Whenever I try to use the Round Pier or Square Pad tools, this message displays:

"Round Piers and Square Pads can only be placed directly under a wall, and are meant to be placed under Foundation Walls acting as grade beams."

What am I doing wrong?

ANSWER

The **Round Pier**  and **Square Pad**  tools are designed specifically to place piers or pads under foundation walls and as a result, they cannot be used anywhere except under a wall.

If you need to place a pier or post in a location that is not under a wall, use the **Slab**  tool, **Primitives**  (Available in Chief Architect Premier only), or one of the various Shapes located in the **Library Browser** , then customize the object's properties to your liking.