

Creating a Sun Room

Reference Number: **KB-00780**

Last Modified: **October 31, 2024**

The information in this article applies to:



QUESTION


I would like to design a sun room, solarium, or conservatory with skylights. What is the best way to do this?




ANSWER



A sun room features large windows and skylights to let in plenty of sunlight. Creating one is easy using the Skylight tool and the steps below.

To create a sun room with shed roof

1. Open the plan file in which you would like to design a sun room or select **File> New Plan**  from the menu to open a new, blank plan.

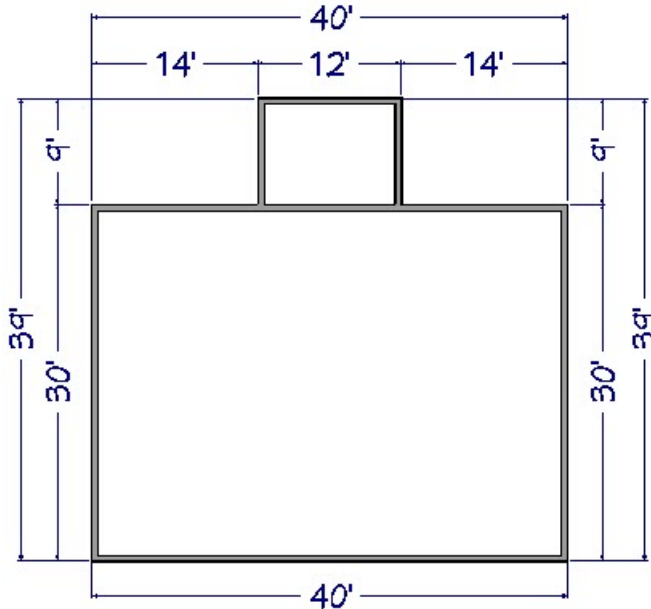In this example, a simple 30' x 40' rectangular structure is drawn, and a 9' x 12' addition will be turned into a sun room.



2. Click the **Select Objects**  button, then click in a blank area inside the sun room to select it and click the **Open Object**  edit button.

3. In the **Room Specification** dialog:

- On the **STRUCTURE** panel, specify the desired **Ceiling** Height and the desired **Floor** Height.

In this example, the Floor Height is set at -7" to create a sunken room and the Ceiling Height is set to 102 1/8".


Uncheck the box beside **Flat Ceiling Over This Room** if you would like to have a vaulted ceiling.


- On the **MOLDINGS** panel, select any moldings that you would like in the room. If you unchecked Flat Ceiling Over This Room, be sure to remove any Crown Molding.
- Click **OK** to close the dialog and apply your changes.

4. Select **Build> Roof> Build Roof**  from the menu.



5. In the **Build Roof** dialog:


- On the **ROOF** panel, specify the roof **Pitch**. In this example, the pitch is set to 6 in 12.

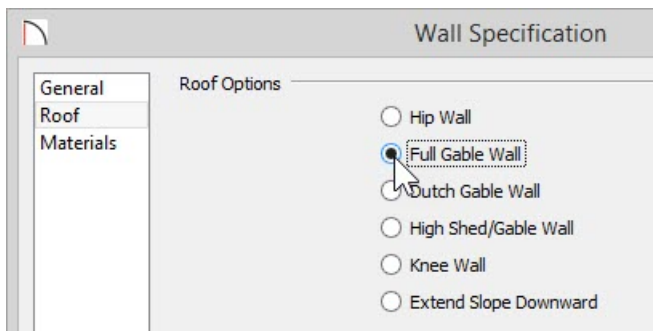- On the **MATERIALS** panel, click on **Skylight Frame** to select it, then click the **Select Material** button.
 - In the **Select Material** dialog, browse the Materials library category and select a material for your skylight frames that will match your roofing as well as your window trim.
 - Click **OK** to close the dialog and build your roof.
6. Select one of the side walls of the sun room and click the **Open Object**  edit button.
7. On the **ROOF** panel of the **Wall Specification** dialog, select the option beside **Full Gable Wall** and click **OK**.



Repeat this step with the other side wall of the sun room to specify it as Full Gable as well.


8. Select the back wall that the shed roof will rest on and then click the **Open Object**  edit button.
9. On the **ROOF** panel of the **Wall Specification** dialog, specify a **Pitch** for the shed roof plane.
- In this example, a **Pitch** of 2 in 12 is used.
10. Next, select the adjoining wall that is part of both the main structure and the sun room and **Open Object**  it to specification.
- On the **ROOF** panel, check the **Upper Pitch** box and specify the upper pitch to be the same value as the lower pitch.

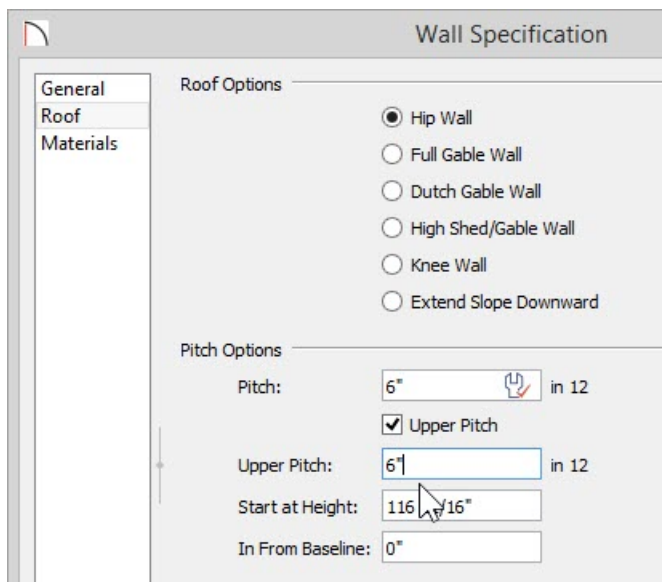


If the roof does not update, select **Build> Roof> Build Roof**, check the box beside **Auto Rebuild Roofs**, and click **OK**.

In Home Designer Essentials, open the **Build Roof** dialog and hit **OK** to re-build the roof.


11. Select **3D> Create Camera View> Perspective Full Overview**  from the menu to see the results so far.

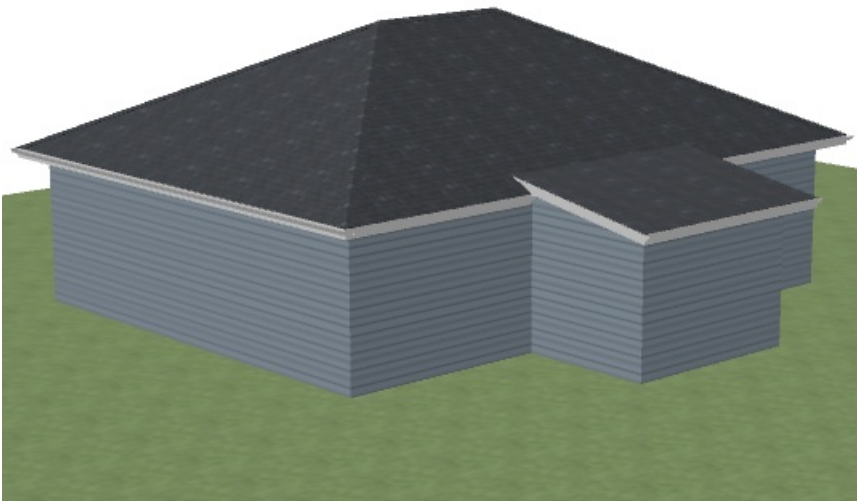






To add a doorway

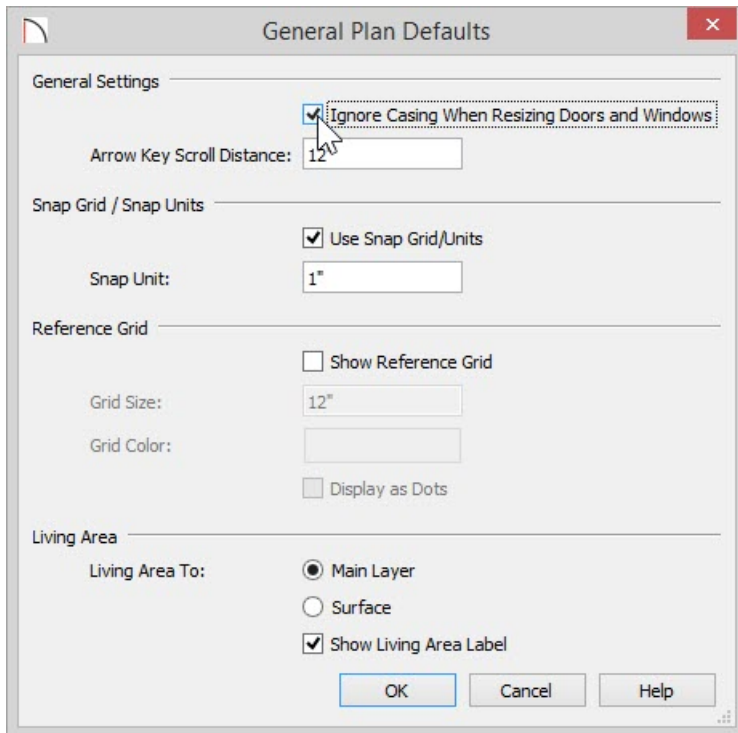1. Select **File> Close View** from the menu to return to floor plan view.
2. Select **Edit> Default Settings**  from the menu. In the **Default Settings** dialog, click on **Plan**, then click the **Edit** button.

3. In the **General Plan Defaults** dialog that displays next:





- Check the box beside **Ignore Casing When Resizing Doors and Windows**, then click **OK** to close the dialog.
 - Click the **Done** button to close the **Default Settings** dialog, as well.
4. Select **Build> Door> Doorway**  from the menu, then click on the wall separating the sun room from the rest of the house to place a doorway at that location.
5. Click the **Select Objects**  button, then click on the doorway to select it.
- Click the **Center Object**  edit button.
 - Click inside the sun room near the wall that the doorway is placed in.
 - The door will become centered along the wall in the room.
6. With the doorway still selected, use the end edit handles to resize it so that it fills the entire wall section.
- You can also place a **Hinged Door**  instead of a doorway opening.
 - When a Hinged Door is 48" wide or more, it automatically becomes a double door.
7. Select **3D> Create Camera View> Full Camera**  from the menu, then click and drag to create a camera view inside the house looking towards the sun room.
- If you want, you can click on the casing, or trim, of the doorway to select it and then click and drag its edit


handles to resize it or raise its top height up until it bumps into the ceiling height of the sun room.




It's not uncommon for skylights to be aligned with the windows in a room.


To add windows and skylights

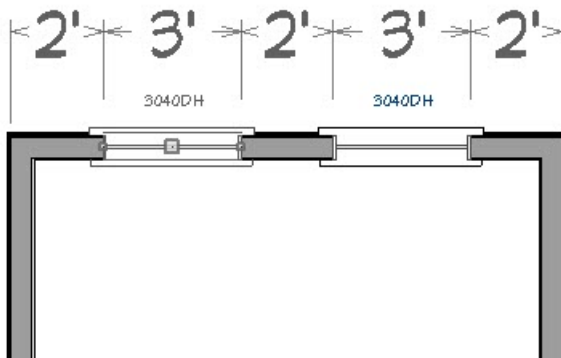

1. Select **File> Close View** from the menu to return to floor plan view.
2. Select **Build> Window> Window**  from the menu, then click on an exterior wall to place a window at that location. Continue clicking to place as many windows as you like.
 - Don't worry about placing the windows accurately now - you can move them into place in a moment.
3. Using the **Select Objects**  tool, click on a window to select it and use the temporary dimension lines that display as guides to move it relative to a wall corner or another window.





The Center Object edit button can be used to center a window or group of windows along a wall inside a room. Select the window(s), click the Center Object edit button, then click inside the room near the wall that the windows are placed in to center them along that wall.

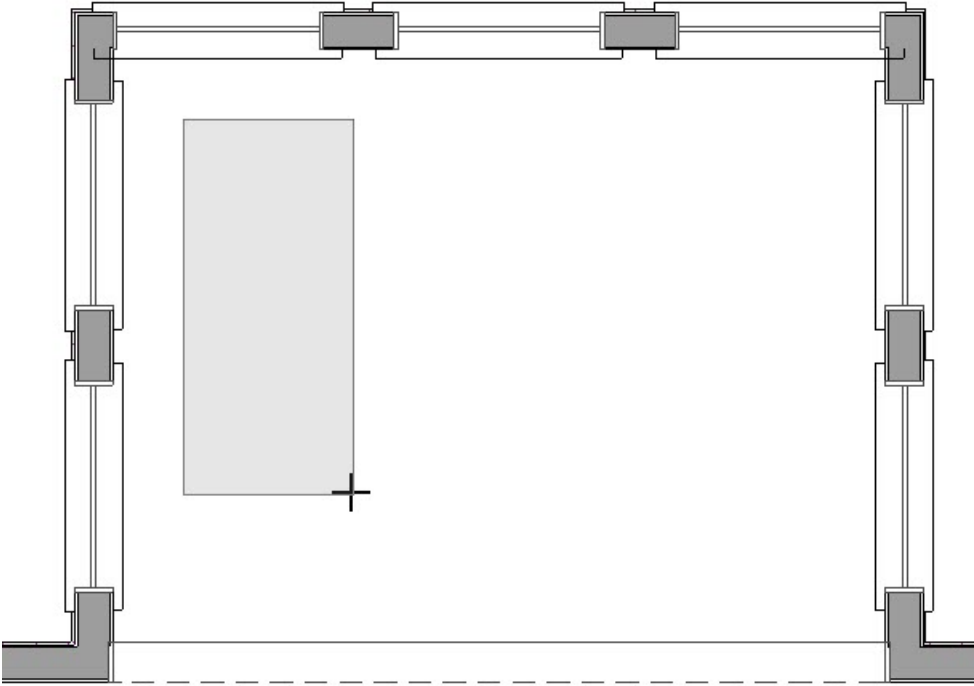4. Select **Build> Roof> Skylight**  from the menu, then click and drag to draw a rectangular skylight.



- Be sure that it is drawn entirely within the edges of a single roof plane.
 - Don't worry about the exact size, shape or placement of the skylight as it is drawn: it can be edited precisely in a moment.
 - In this example, three skylights are drawn.
5. Click the **Select Objects**  button, then click on the skylight on the left to select it and display its edit handles.
 - If you select another object such as the roof plane or the room instead, click the **Select Next Object**  edit button or press the **Tab** key on your keyboard.
 6. Click and drag the edit handles of the skylight to resize it and move it into position relative to the walls and windows of the room.
 - Use the temporary dimension lines that display to help you resize and move the skylight precisely.
 7. Repeat steps 5 and 6 with each skylight so that they are evenly spaced.

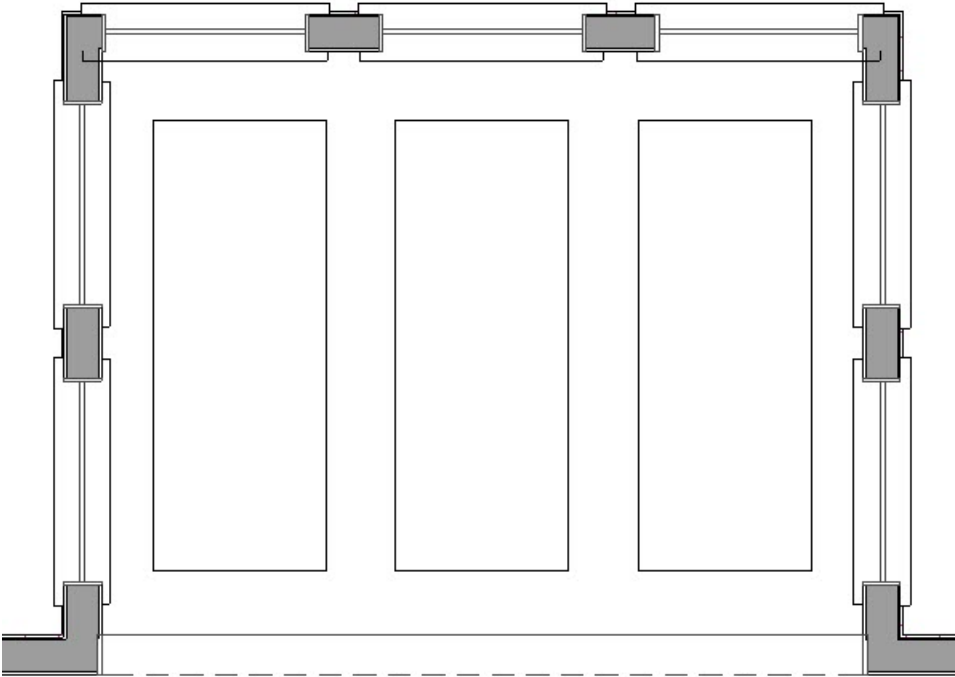





8. Select **3D> Create Camera View> Full Camera**  from the menu, then click and drag a camera arrow inside the house to see your work.



Once the structure of the sun room is designed, it's time to decorate the room using furnishings, accessories, and materials.



To decorate your sun room

1. Select **View> Library Browser**  from the menu to open the **Library Browser**.

2. Select furniture for your room by browsing to the **Interiors** and **Exteriors** library categories.
3. Browse a selection of potted plant images in the **Plants** library category.
4. Select **3D> Create Camera View> Full Camera**  from the menu, then click and drag a camera arrow inside the house to see your work.
5. 3D views are a great place to experiment with different materials for floors, trim, furnishings and other objects in your plan. While in a 3D view, select **3D> Material Painter> Material Painter**  from the menu.
 - In the **Select Material** dialog, browse the Materials library to find a material that you would like to apply to an object in your plan.
 - Select the material and click **OK** to return to the 3D view. Your pointer will display the Material Painter  icon.
 - Click on the surface of an object to apply the selected material to that surface.

It's not recommended to use the Material Painter on walls as it may produce undesired results. Use the Wall Specification dialog to modify a wall's material instead.

Related Articles

-  [Changing the Color or Material of a Single Wall in Home Designer \(/support/article/KB-00071/changing-the-color-or-material-of-a-single-wall-in-home-designer.html\)](/support/article/KB-00071/changing-the-color-or-material-of-a-single-wall-in-home-designer.html)
-  [Creating Glass Walls \(/support/article/KB-02263/creating-glass-walls.html\)](/support/article/KB-02263/creating-glass-walls.html)